



PRODUCT NAME:

Interchangeable Rx System

PRODUCT DESCRIPTION

This product is designed for use in both the Smith Outside The Wire (OTW) goggle and the Smith Aegis Eyeshield. One lens carrier will fit in both products.

COMPONENT DETAILS:

- Compatible with both OTW goggle and Aegis eyeshield
- Easy interchangeability between OTW goggle and Aegis eyeshield
- Rx system accommodates a correction of up to +/-11 diopters
- Durable lens carrier and component materials

LENS CARRIER COLOR OPTIONS

Black

PRODUCT CONFIGURATION


Each Rx system includes one Rx lens carrier, an OTW nose attachment, an Aegis nose attachment, an Rx nose piece for the Aegis, carrying pouch and instructions.

PRODUCTION FACILITY:

Smith Manufacturing
P.O. Box 160464
Freeport Center, Building F-13
Clearfield, UT 84016 USA

CONTACT INFORMATION

Mike Torres
Sales Manager
Smith Optics Elite Division
P.O. Box 2999
280 Northwood Way
Ketchum, ID 83340 USA
208.727.6583

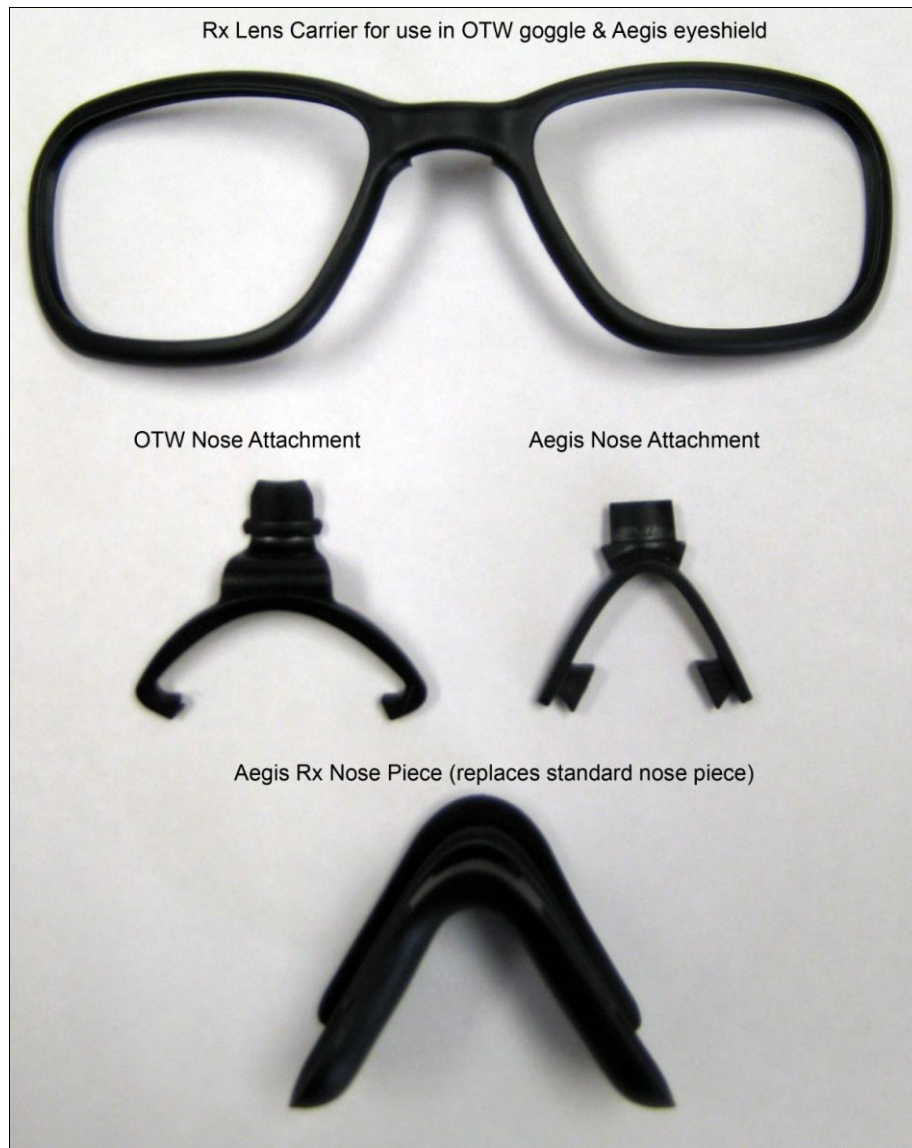

Rx Installation Instructions for OTW goggle:

- Insert the *OTW Nose Attachment* into the slot in the bridge of the *Rx Lens Carrier* until it snaps into place. The shelf of the attachment should protrude out the front of the Rx Lens carrier.
- The OTW goggle has two notches on either side of the frame and a nub at the top. Center the Rx system over the nose as close to front of frame as possible. Push down until the hooks of the Nose Attachment lock under each notch and it sits in front of the nub.
- To remove, pinch the Nose Attachment and the bridge of the Rx Lens Carrier and pull down until released from the goggle frame.

Rx Installation Instructions for Aegis Eyeshield:

- Remove OTW Nose Attachment from the Rx Lens Carrier if installed.
- Insert the *Aegis Nose Attachment* into the slot in the bridge of the *Rx Lens Carrier* until it snaps into place.
- Install the Rx system into the back slot of the Rx Nose Piece. Note: The *front* of the nose piece is the highest rise of material. Hook the nose attachment into the two rectangle slots.
- Remove the standard nose piece from the Aegis lens. Insert the Rx system onto the lens by inserting the lens into the front slot of the Rx Nose Piece. Lens tabs will insert into rectangle slots of nose piece.
- To remove, pinch nose piece together and pull down.